




IP54 Pb 230V 50/60Hz

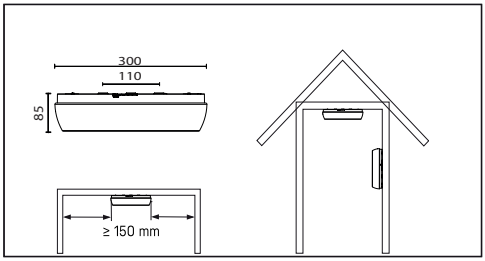


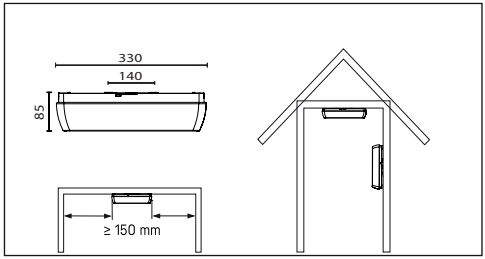


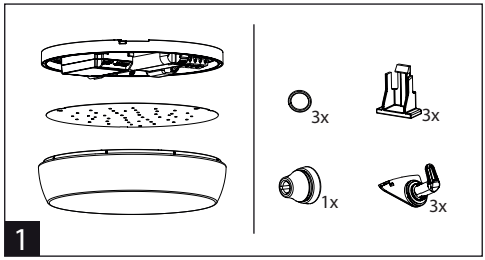

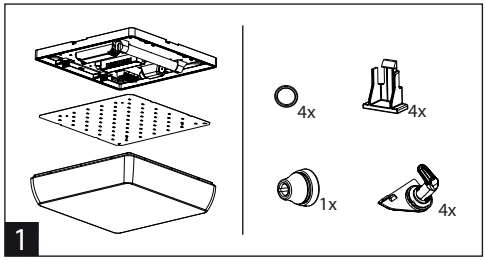

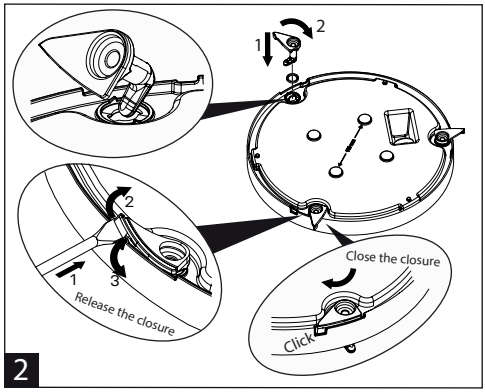


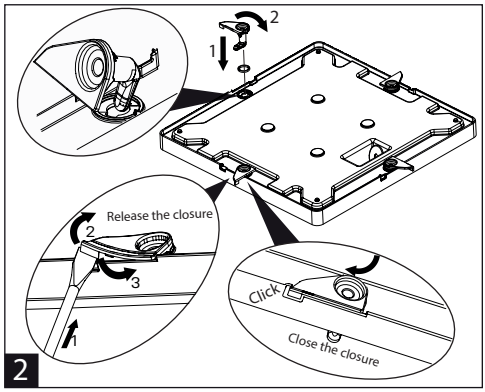

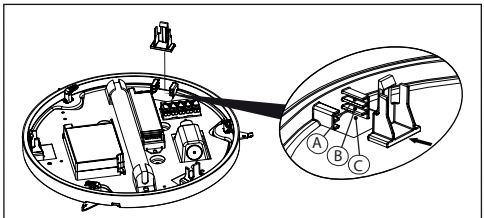

Spacer part position considering to inside equipment of luminaire	
A	Motion sensor
B	Emergency lighting
C	Without emergency lighting and motion sensor


3

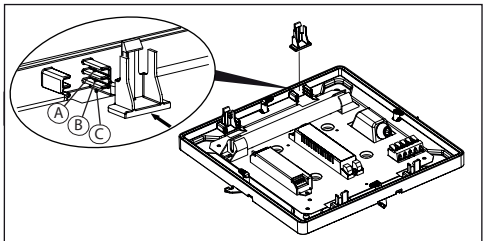



Spacer part position considering to inside equipment of luminaire	
A	Motion sensor
B	Emergency lighting
C	Without emergency lighting and motion sensor


3


IP54 Pb 230V 50/60Hz

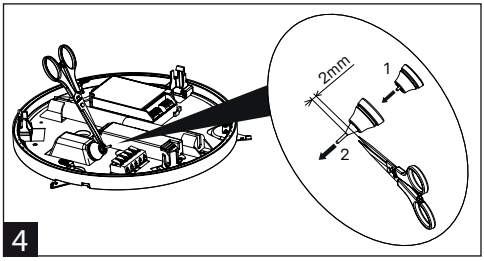


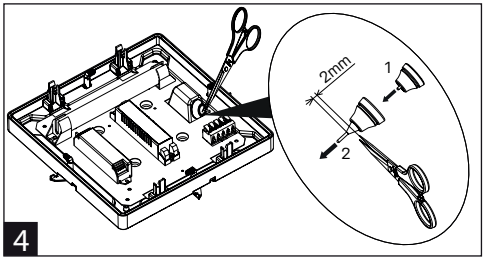


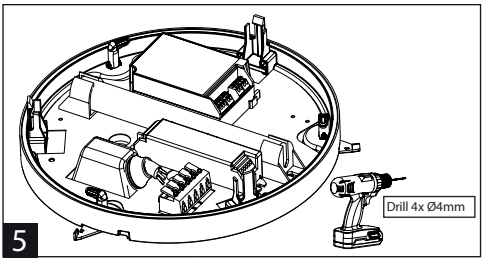

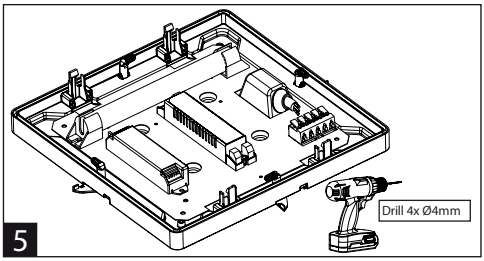


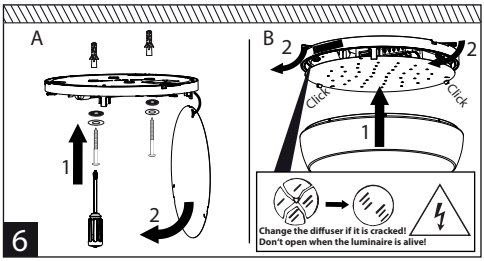

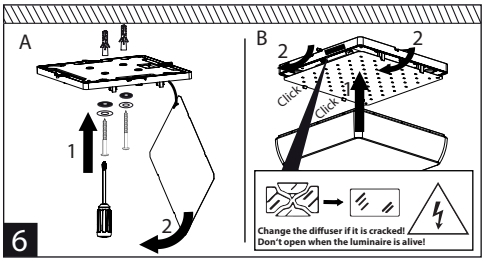

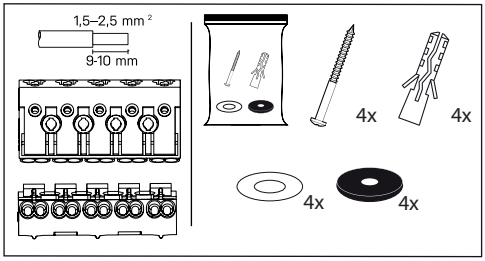

Cable gland positions

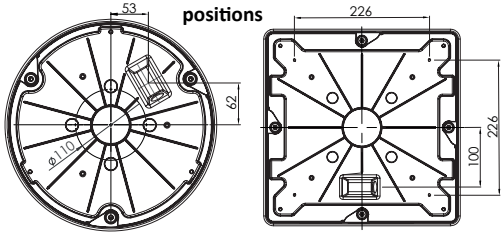

Installation can only be carried out by an authorized person and according to the mounting instructions. Any other installation is considered to be improper. For well installation and good luminaire work is necessary ensure a planarity of a mounting surface. Make sure that the luminaire is always disconnected from the power supply before the installation work. Do not use the luminaire if damaged or if damaged the power cable. Only damp microfiber cloth can be used for cleaning. Technical changes are subjected without notice. Do not dispose the luminaire or its parts as household waste, but make the proper recycling.

Table of maximal number of luminaires in one line					10A B Σ luminaires	10A C Σ luminaires	16A B Σ luminaires	16A C Σ luminaires
Type	∑lm	∑lm	∑lm	∑lm				
Round	1200	1800	2400	3600	31	52	50	85
Round	3600				31	52	50	75
Square	1200	1800	2400		31	52	50	85
Square	3600				31	52	50	75

The light source in this luminaire may be replaced only by the manufacturer or its contractual service technician or similarly qualified person!

